www.oxo.com

OXO GOOD GRIPS®

V-Blade Mandoline Slicer

OXO's very versatile V-Blade Mandoline slices fruits and vegetables with ease. Please familiarize yourself with its variety of blades and cutting options. For safe operation, always use the Food Holder.

CAUTION!

The OXO GOOD GRIPS V-Blade Mandoline Slicer blades are very sharp. Handle them with care when using the Mandoline and when cleaning the components. Always use the Food Holder to prevent injury. Do not leave the OXO V-Blade Mandoline Slicer or any components within reach of children.

OXO GOOD GRIPS®

V-Blade Mandoline Slicer

I. What's Included pg. 2

II. Quick Start Guide to Slicing

- a. Straight or Crinkle Cutting 5
- b. Julienning or French Frying 6

III. Use & Care

- a. Switching V-Blades 8
- b. Switching Julienne Blades 10
- c. Disassembly & Cleaning 12
- d. Reassembly & Storage 15

IV. Accessories 17

WHAT'S INCLUDED

MAIN BODY

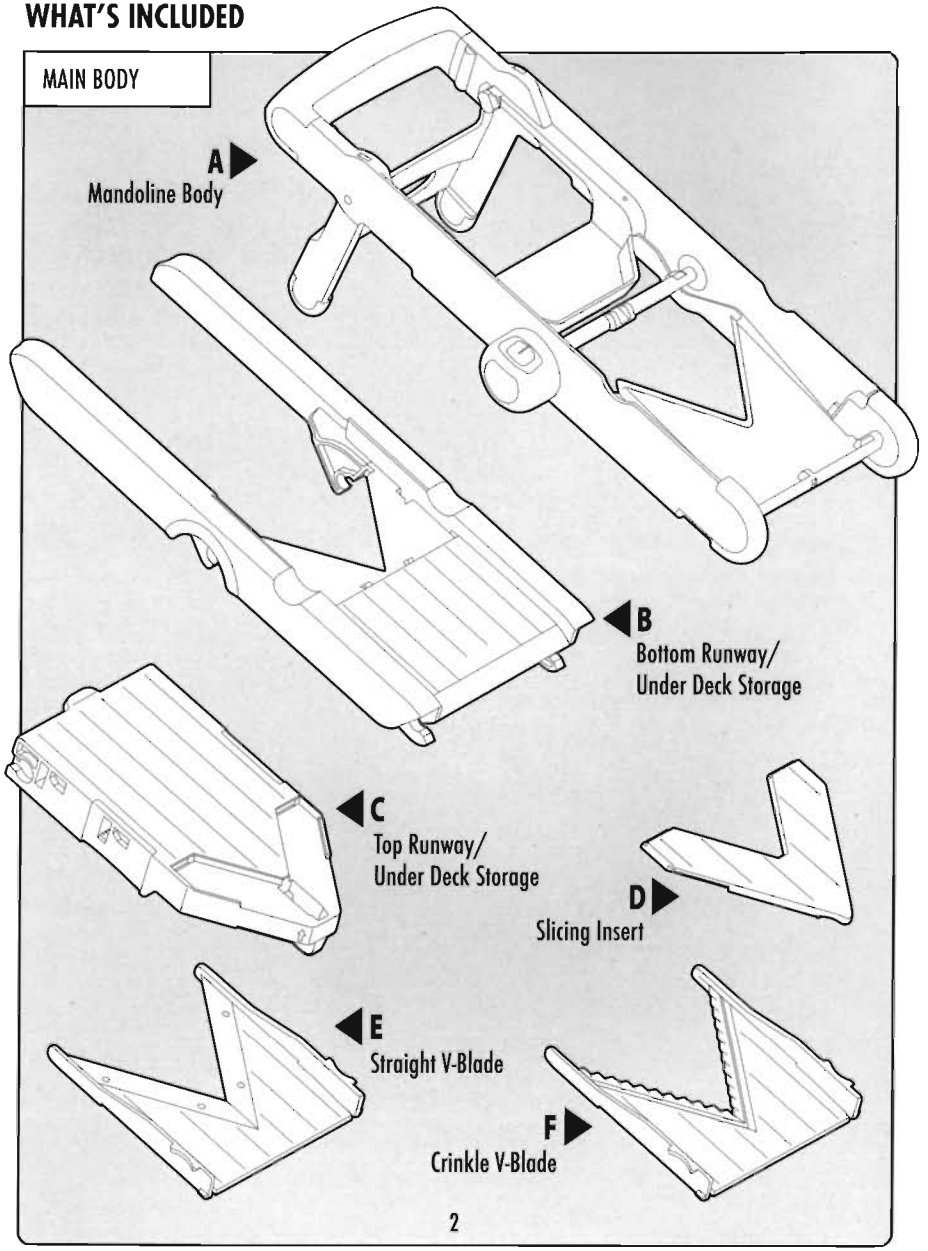

A
Mandoline Body

B
Bottom Runway/
Under Deck Storage

C
Top Runway/
Under Deck Storage

D
Slicing Insert

E
Straight V-Blade

F
Crinkle V-Blade

JULIENNE BLADES

G
Julienne Blade (3 mm)

H
French Fry Blade (6 mm)

FOOD HOLDER

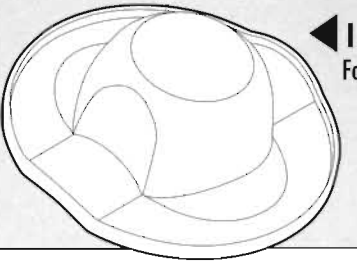

I
Food Holder

QUICK START GUIDE TO SLICING

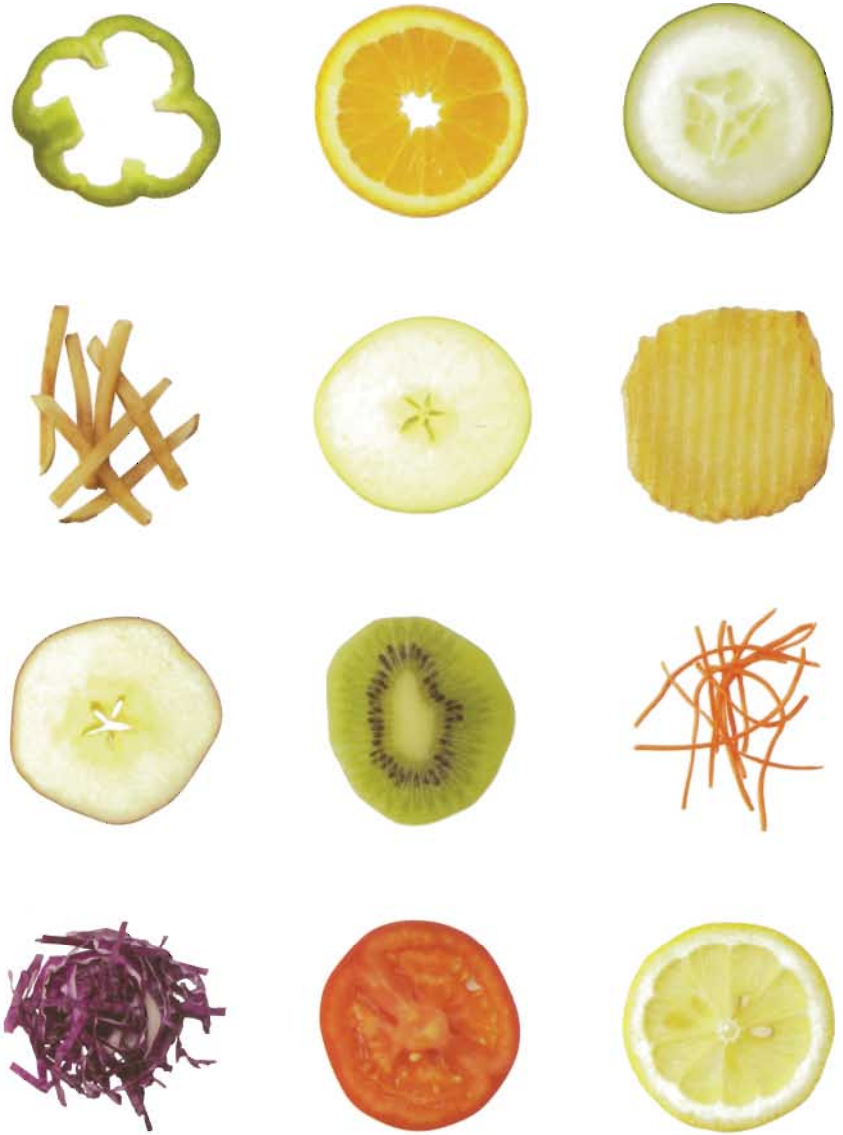

STRAIGHT OR CRINKLE CUTTING

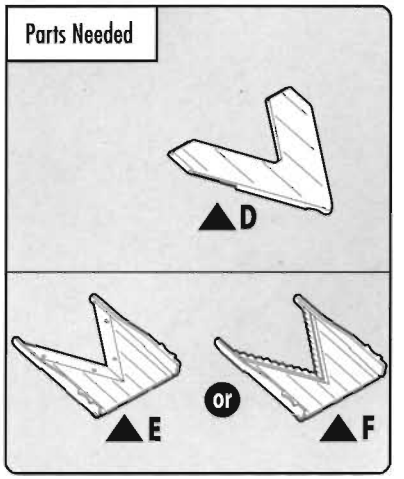

Straight or crinkle cutting requires slicing insert (**D**) and either the straight V-Blade (**E**) or the crinkle V-Blade (**F**). (For details on switching blades, see pg. 8)

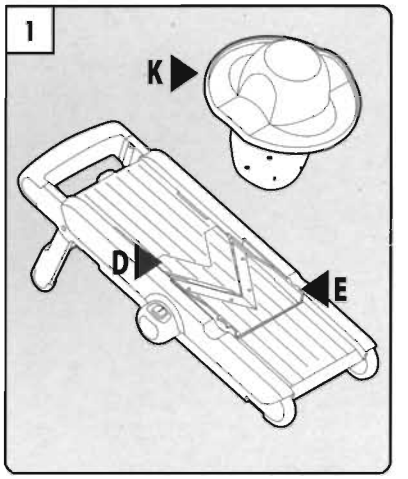

Load slicing insert (**D**) and either the straight V-Blade (**E**) or crinkle V-Blade (**F**) into mandoline. Load food into food holder (**K**).

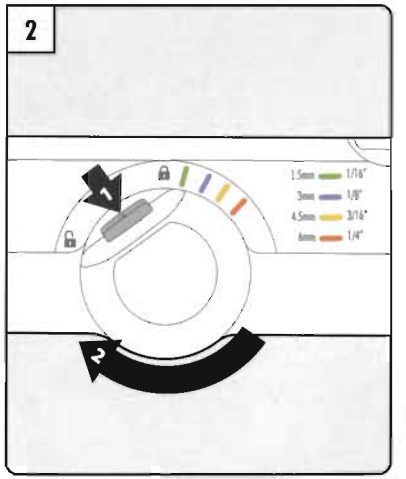

Push button on dial and turn to select desired slice thickness.

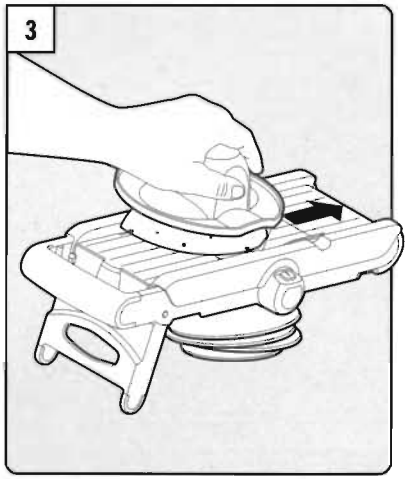

Using food holder (**K**), run food over blade to make slices.

JULIENNING OR FRENCH FRYING

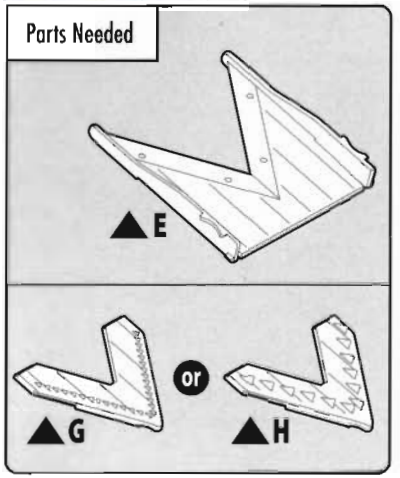

Julienning requires straight V-Blade (**E**) and either the julienning blade (**G**) or French fry blade (**H**). (For details on switching blades, see pg. 10)

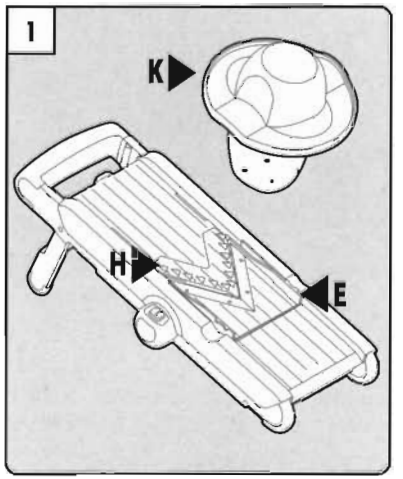

Load straight V-Blade (**E**) and either the julienning blade (**G**) or French fry blade (**H**) into mandoline. Load food into food holder (**K**).

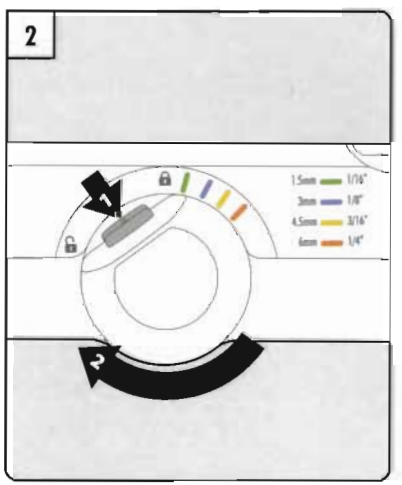

Push button on dial and turn to select the required slice thickness (blade is color coded).

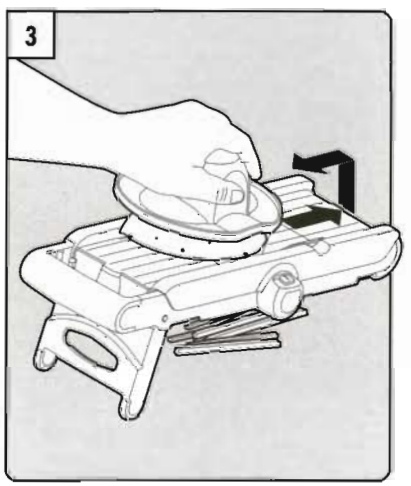

Using food holder (**K**), run food over blades to make julienne slices. Lift on back stroke.

USE & CARE

SWITCHING V-BLADES

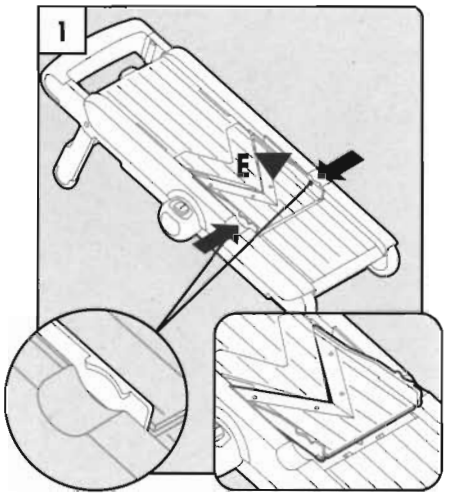

Push tabs of straight V-Blade (**E**) until it releases.

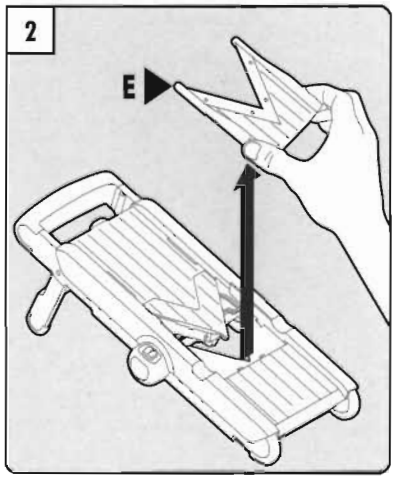

Remove straight V-Blade (**E**).

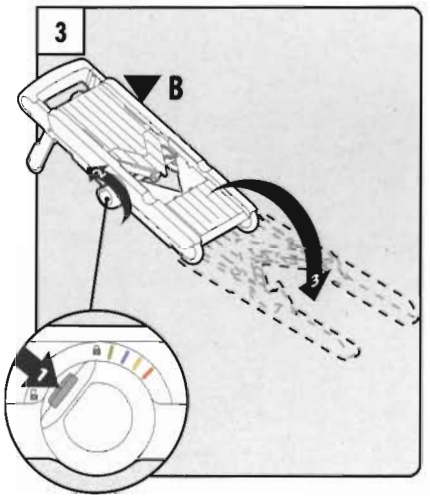

Push button on dial and turn to unlock position. Open bottom runway (**B**).

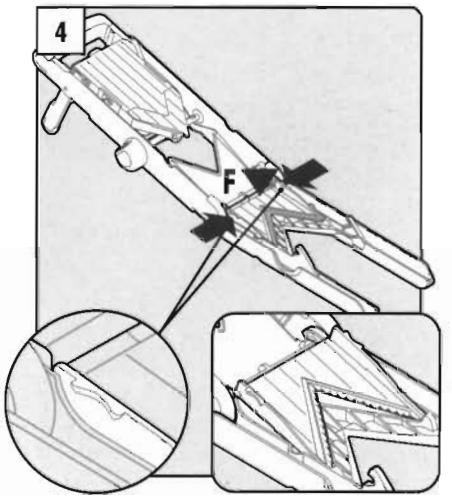

Pinch tabs of crinkle V-Blade (**F**) in storage until it releases.

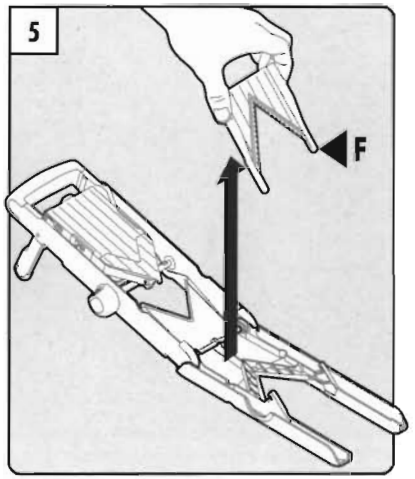

Remove crinkle V-Blade (**F**) from storage.

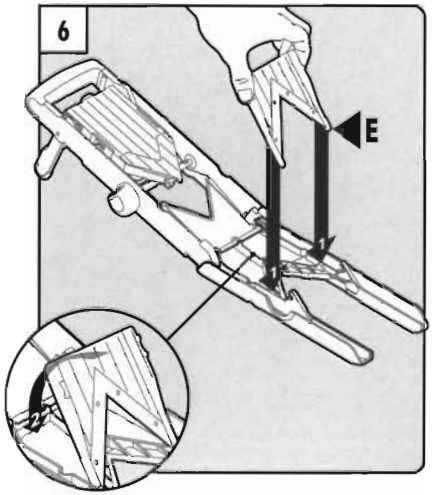

Place straight V-Blade (**E**) in storage.

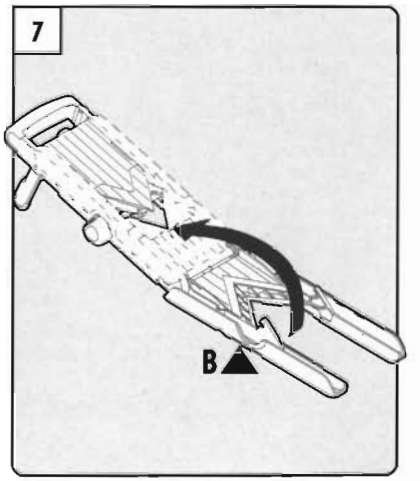

Close bottom runway (**B**).

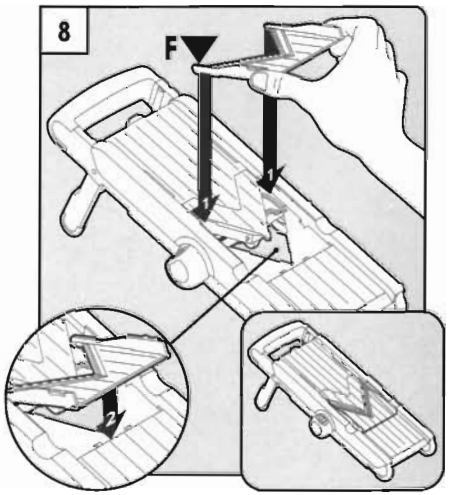

Insert crinkle V-Blade (**F**).

SWITCHING JULIENNE BLADES

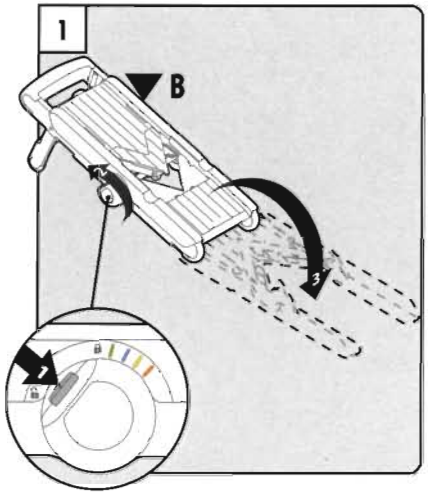

Push button on dial and turn to unlock position. Open bottom runway (**B**).

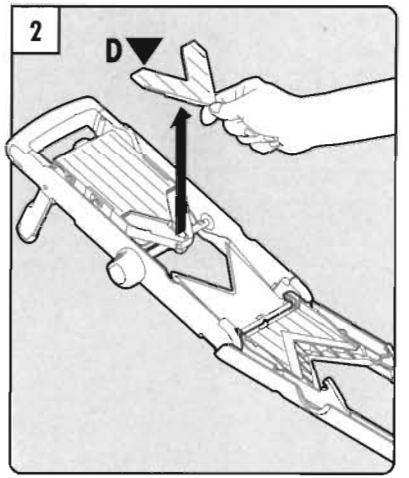

Remove slicing insert (**D**).

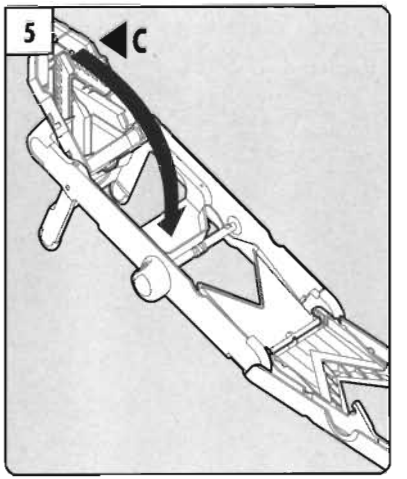

Close top runway (**C**).

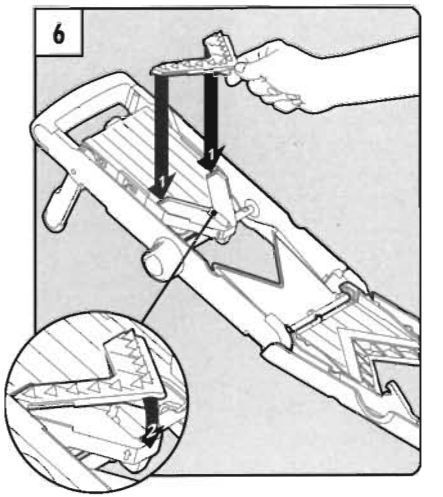

Insert desired julienne blade (**G**) or (**H**).

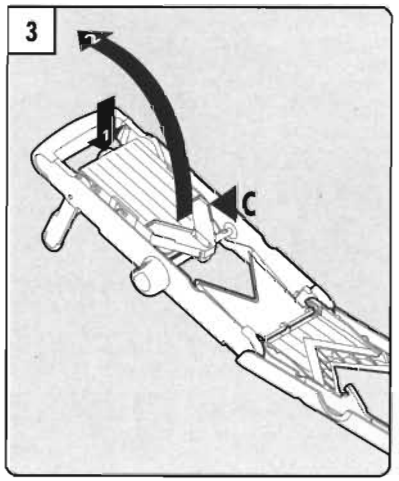

Open top runway (**C**).

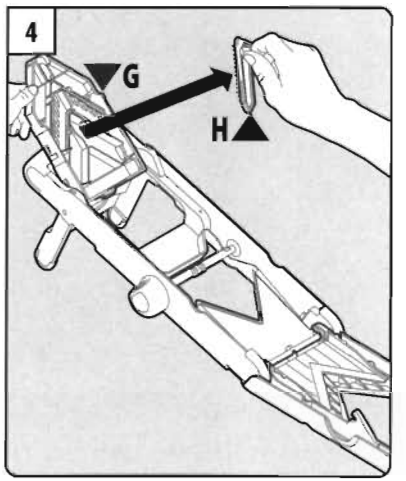

Select desired julienne blade (**G**) or (**H**) from under deck storage.

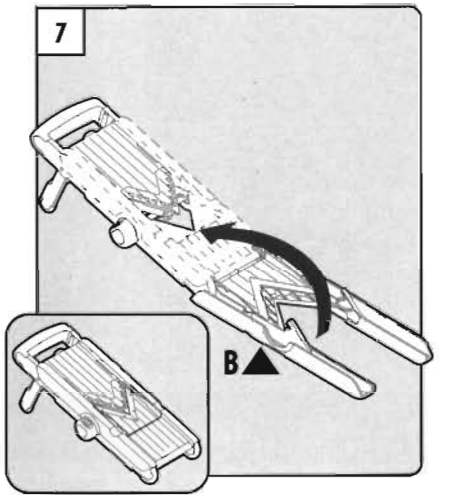

Close bottom runway (**B**).

DISASSEMBLY & CLEANING

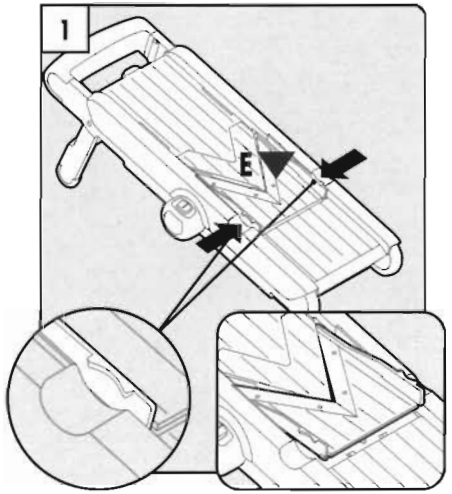

Push tabs of straight V-Blade (**E**) until it releases.

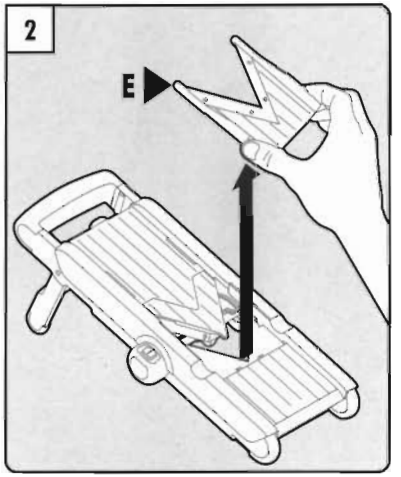

Remove straight V-Blade (**E**).

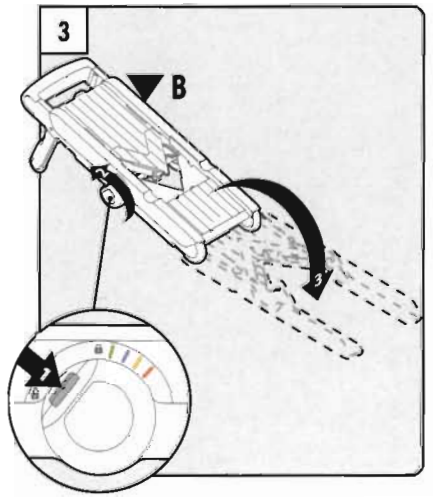

Push button on dial and turn to unlock position. Open bottom runway (**B**).

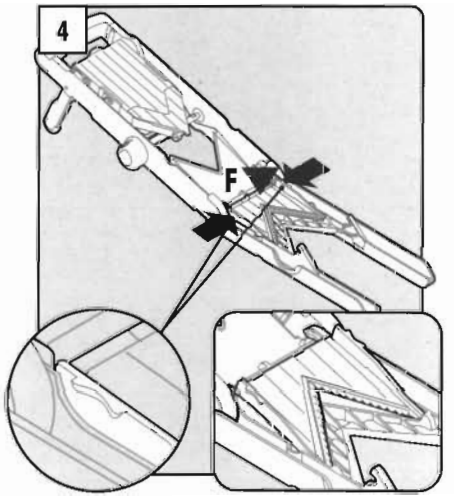

Pinch tabs of crinkle V-Blade (**F**) in storage until it releases.

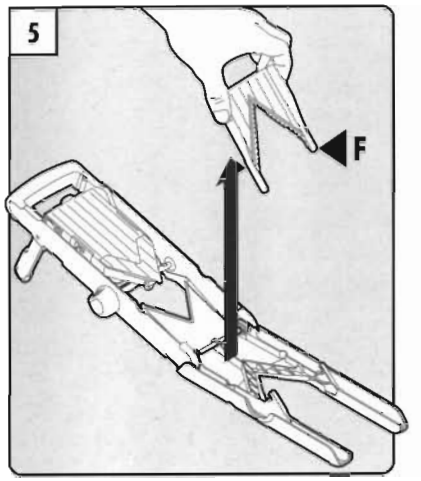

Remove crinkle V-Blade (**F**) from storage.

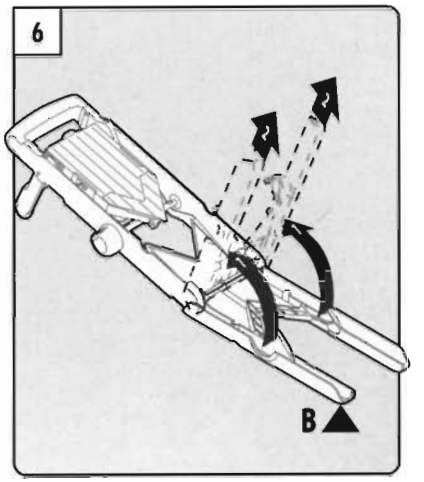

Raise bottom runway (**B**) and remove.

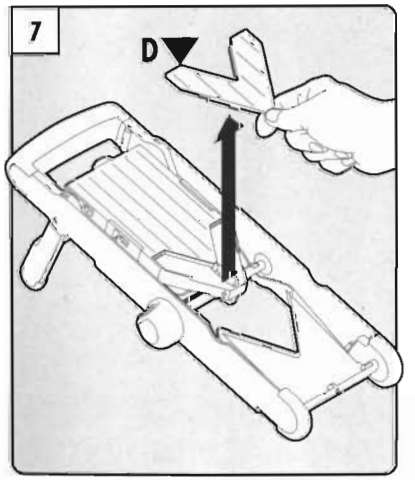

Remove slicing insert (**D**).

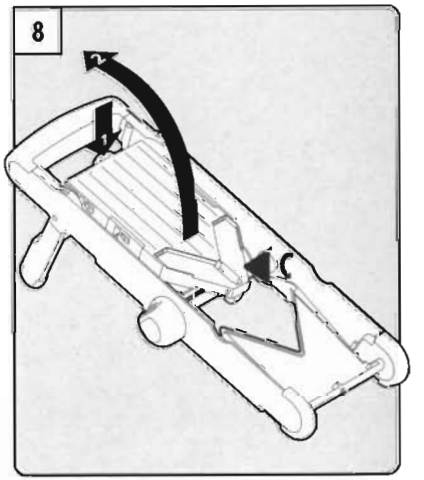

Open top runway (**C**).

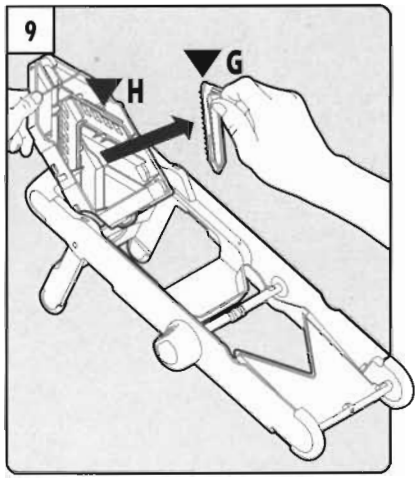

Pull tabs to remove both julienne blades (**H**) and (**G**) from under deck storage.

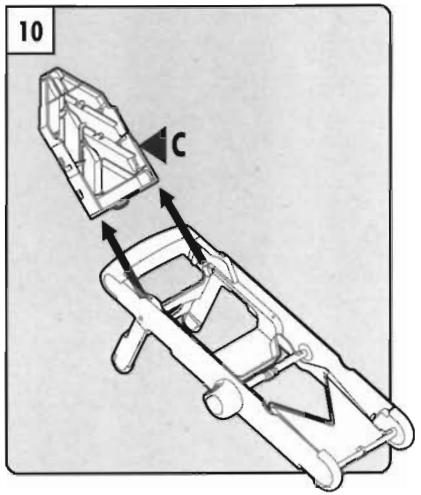

Remove top runway (**C**).

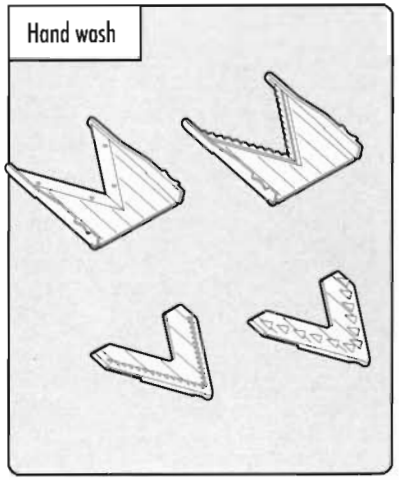

Hand wash blades.

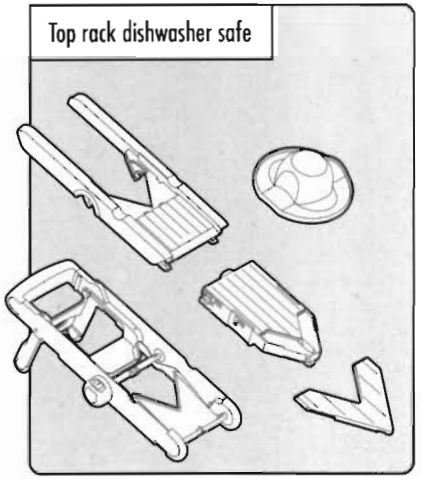

Wash all other parts in top rack of dishwasher.

REASSEMBLY & STORAGE

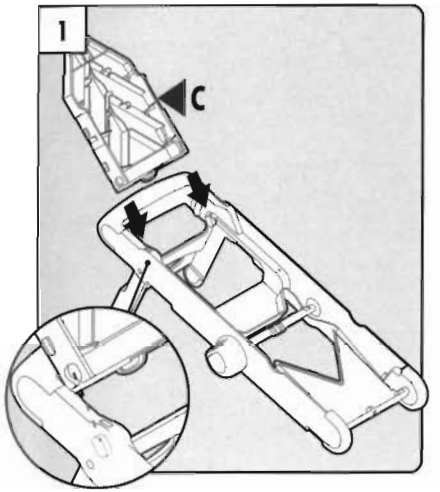

Attach top runway (**C**).

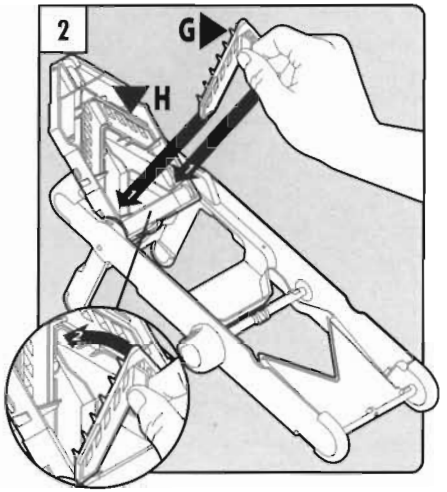

While top runway (**C**) is open, attach both julienne blades (**H**) and (**G**) to under deck storage.

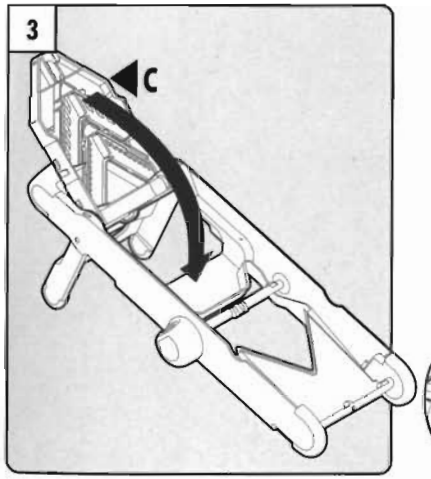

Close top runway (**C**).

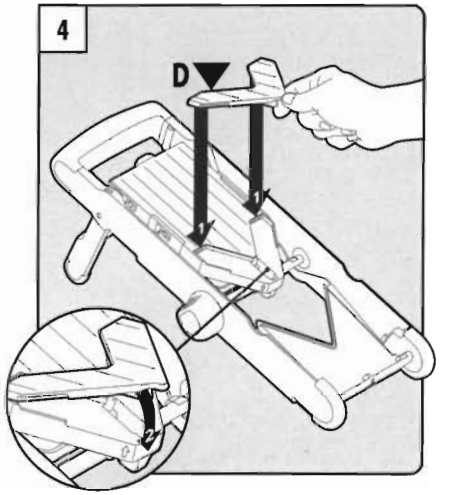

Attach slicing insert (**D**).

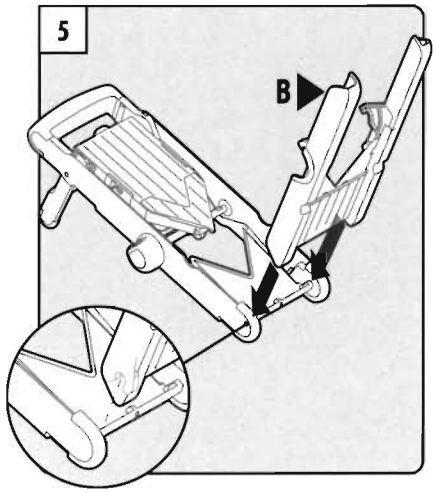

Attach bottom runway (**B**).

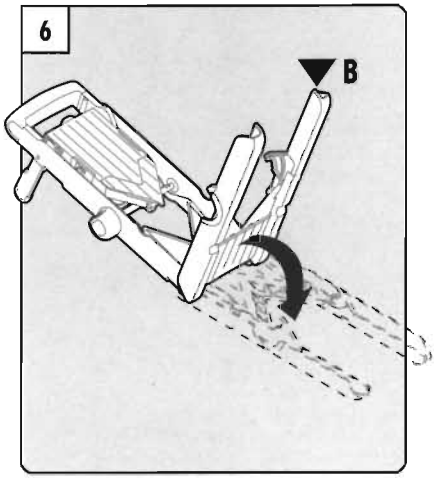

Open bottom runway (**B**).

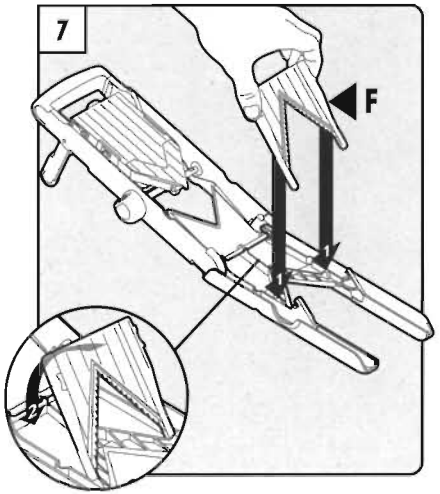

Place crinkle V-Blade (**F**) in under storage deck.

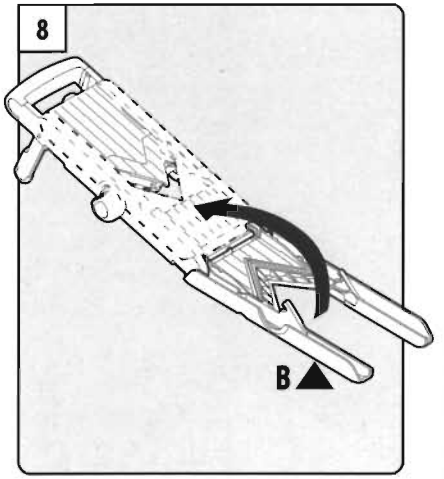

Close bottom runway (**B**).

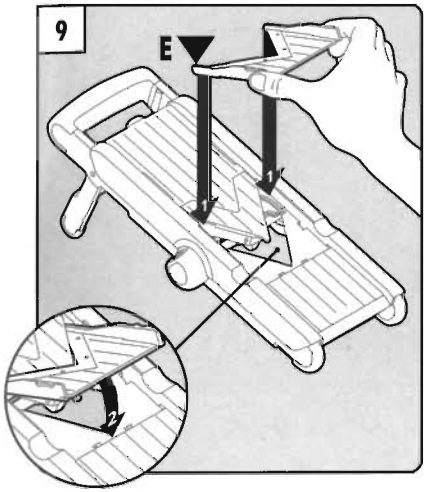

Insert straight V-Blade (**E**).

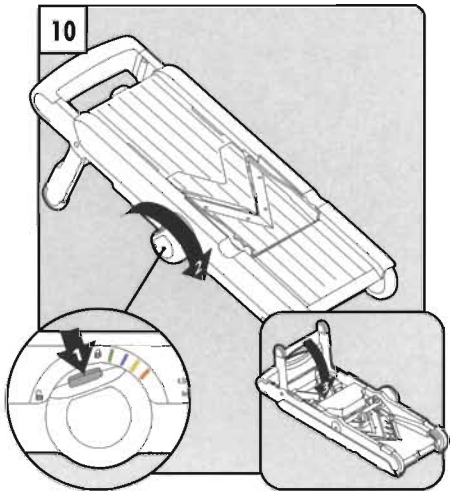

Push button on dial and turn to lock position. Fold in legs.

ACCESSORIES

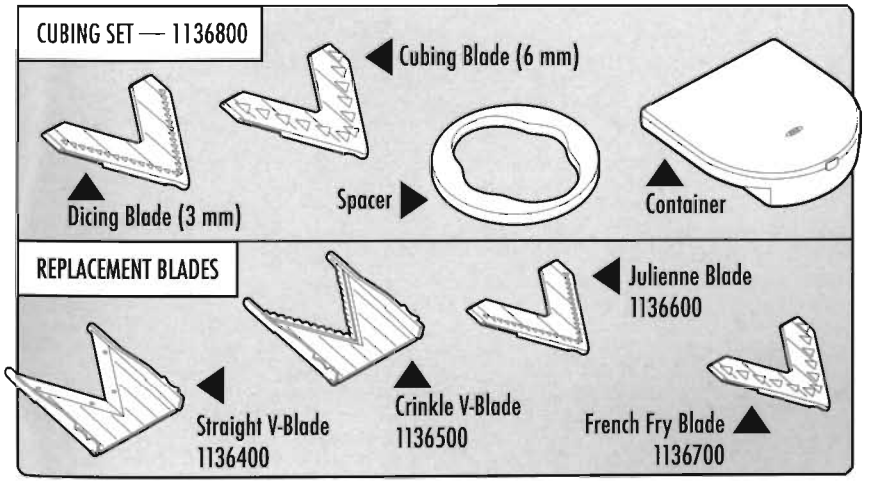

Available at oxo.com